

HOW TO FIT...

MONKEY TAIL BOLT / BOW HANDLE BOLT

TOP MOUNT - RECESSED DOOR




1.

Position bolt to the top of the door at required position and fit using screws provided.




2.

Push bolt up to the head of the door frame and mark position of bolt on frame.

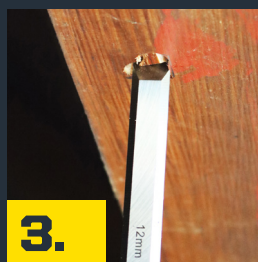


3.

Cut hole into frame at marked position with width and depth to accept the bolt.

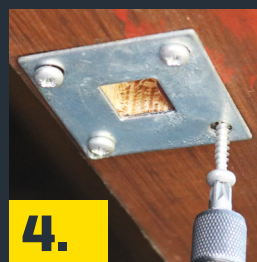

4.

Position flat receiver plate over the hole and fix with screws provided.

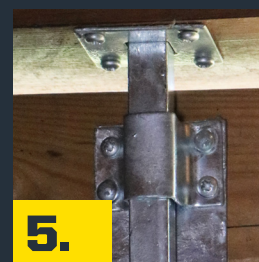

5.


Check door opens and shuts without any catching.

TOP MOUNT - FLUSH DOOR



1.

Position bolt to the top of the door at required position and fit using screws provided.

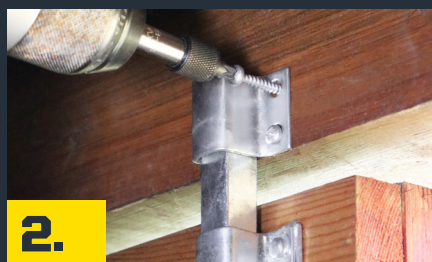

2.

Push bolt up and locate surface keep over bolt and onto the door frame, mark fixing hole positions and fix using screws provided.



3.

Check gate / door opens and shuts without any catching.

BOTTOM MOUNT



1.

Position bolt to the bottom of the door at required position and fit using screws provided.



2.

Push bolt down and mark position of bolt on the floor. Cut hole in the floor to width and depth to receive bolt.



3.

Position flat plate over the hole and fix with screws provided and screw plugs (not included).