

HOW TO FIT...

RIM SASH LOCK FLUTED



1.

Decide the height on the door where the lock is to be fitted. Hold the lock against the door with the lock face flush with the door edge. Mark the position of the lock face and chisel out the wood 2mm deep.




2.

Reposition the lock face, with your bradawl or pencil, mark the centre of the square spindle hole and the top and bottom of the keyhole.



3.

Drill through the door and chisel to allow enough clearance for the door handle spindle to turn freely. Drill through the top and bottom marks of the keyhole and chisel a large enough hole for the key to be turned.

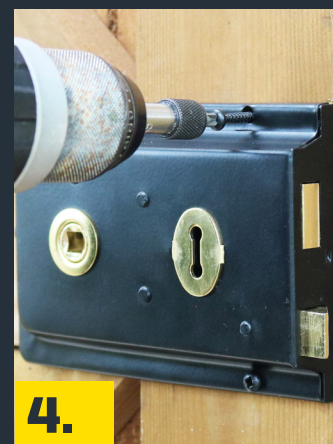

4.

Attach the rim lock to the surface of the door with woodscrews.




5.

Close the door. Place the keep in line with the lock. Turn the key of the lock and throw the deadbolt into the keep.



6.

Attach the keep with woodscrews.

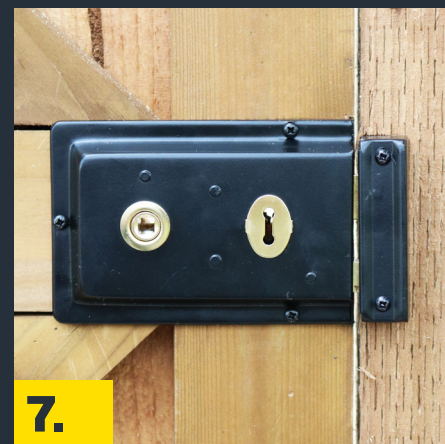

7.

Check gate / door opens and shuts without any catching.